



Connecting the PIG PEN to the ALARM controller:

Use the PIG PEN's RJ12 connection to wire the PIG PEN back to the alarm controller. The appropriate power (+5V, +12V) and ground should be taken from the Alarm controller.

White = InX – this is the PIG data line and can connect to IN1, IN3, IN5, IN7 or PIG1.

Each input from the controller must not have more than 50 pig inputs (i.e. maximum one pig pen per controller pin) with a maximum of 200 PIG inputs per controller.

The PIG PEN's should be located as close as possible to the controller.

